

INSTALLATION MANUAL



BILLI ULTRA Boiling Water System

Billi Ultra Installation Instructions

Installing and commissioning the Billi Ultra Boiling water unit

Thankyou for purchasing the Billi Ultra Boiling water system. Please note that the casing of this unit is not water proof. If installed outdoors a suitable enclosure must be provided. This appliance must be earthed.

THE INSTALLATION OF THIS UNIT MUST COMPLY WITH ALL PLUMBING, ELECTRICAL AND BUILDING REGULATIONS.

1. REMOVING THE JACKET FRONT.


The jacket front is attached to the Jacket Back by means of two pins at the top of the unit , and two screws at the base of the unit.. Remove the two screws located at the base of the unit. Grip the jacket front at the base and lift. Once the fron has been lifted clear of the base, it can be freed from the locating pins at the top and removed.

2. POSITIONING THE UNIT

The unit should be positioned directly of the bowl of a sink. Any dripping of the tap through wear and tear or as a result of lime scale build up is likely to result in scalding. The tap height should be low enough that the operator never loses visual contact with the water level in the cup being filled.

A minimum clearance of 20mm must be left between the top of the unit and any fixtures above to allow for the removal of the front jacket

Diagram 1

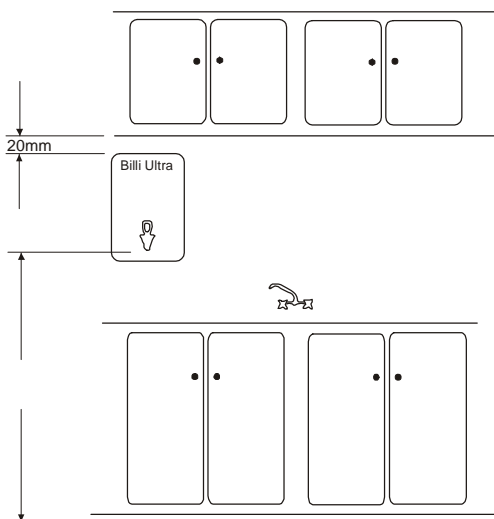

3. MOUNTING THE UNIT

CARE SHOULD BE TAKEN TO AVOID POSSIBLE DAMAGE TO ELECTRICAL OR PLUMBING SERVICES WHICH MAY BE LOCATED BEHIND THE WALL

Remove the cover from the unit. The unit may be mounted to the wall by means of suitable screws fitted through the 3 key hole slots provided in the rear of the unit.

5. CONNECTING THE UNIT TO THE WATER SUPPLY

Connect the water supply to the fitting marked "Inlet"

Connect the vent or drain pipe work to the fitting marked "Vent"

A vent pipe **MUST** be connected to the unit. Failure to connect a vent pipe to the unit may result in the warranty being declared void.


NOTE: THIS APPLIANCE IS AN OPEN VENTED APPLIANCE AND MUST BE PLUMBED IN ACCORDANCE WITH REGULATIONS AS APPLICABLE. AT NO TIMES MUST THE VENT BECOME BLOCKED OR OBSTRUCTED.

5. COMMISSIONING.

Fit the tap supplied to the unit. Plug the unit into the 240 Volt 10 Amp socket. Open the water supply and switch the unit on.

NOTE: The unit will only begin filling once the power is switched ON.
On the first fill cycle, heating will only commence once the unit is full.

Diagram 2

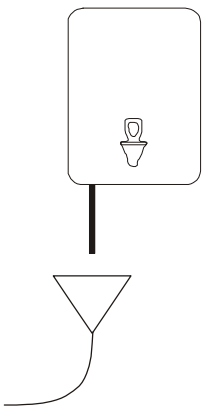

Billi Pty Ltd
42 Lucknow Crescent,
Thomastown
Victoria 3074

Tel: +61 9469 0400
Fax: +61 39469 0499
Email info@billi.com.au

Service & Support
Service@billi.com.au
Tel: 1300 300 316

BilliTM