

User guide

Billi Eco Sparkling – XL.

Options and Operation

To operate, simply press the left lever to dispense boiling water and the right lever to dispense chilled. Pressing both levers will dispense sparkling water. When lifted the levers will latch for continual delivery, until released with a light press.

Operating modes can be selected by the user by entering Options Mode.

Within the options mode, you can set the safety switch through the hot water lever and power save mode through the cold water lever.

To enter the options mode:

1. If the following sequence malfunctions, remove the sparkling unit control box and try again.
2. Turn on the unit and wait for normal operation (red & blue icons are both illuminated constantly).
3. Press both the hot and cold levers on the dispenser. While holding the two levers down, touch the safety switch indent at the back of the dispenser. Hold both levers and the safety switch until dispenser lights change colour.
4. Release both the levers & safety switch.
5. Within 10 seconds, push and release the pressure relief button on the unit.
Note: Older models may require this step to be skipped.
6. Unit is now in options mode.
7. If you wish to change or set the safety switch mode, follow the safety switch settings procedure. If you wish to change or activate the power saving mode follow the power save mode settings procedure.

Safety Switch settings

The **Red** padlock indicates the different safety settings enabled. To change or activate a setting once in options mode, press and release the hot (left) lever to scroll through the following options;

- **Red Icon Off:** indicates the hot tap is disabled.
- **Padlock icon on, Red icon on:** indicates safety switch is enabled
- **Red Icon On:** indicates normal operation with safety switch not enabled.

To save new setting and exit Options Mode, touch the safety switch and release. Wait 10 seconds for unit to return to normal operation, with the desired settings.

To dispense boiling water once the safety switch is activated simply touch the indent on the black panel, at the back of the tap. You will be able to dispense boiling water for 8 seconds. After 8 seconds the safety switch will automatically reactivate, and the red padlock icon will appear again.

Power save mode settings (EcoIntelligence, standby or on 24/7)

The **Green** icons on the tap indicate the power save level that is selected. To change or activate a setting once in options mode press and release the cold(right) lever to scroll through the following options;

- **Green Leaf icon:** indicates Eco Intelligence™ self learning timer is enabled.
- **Moon & Star Icon on:** indicates Standby Mode is enabled.
- **Blue Icon On, no green icons:** indicates system is in 24 hour continuous mode

To save new setting and exit Options Mode, press the safety switch and release. Wait 10 seconds for unit to return to normal operation, with the desired settings.

Holiday mode

To set press the pressure relief valve located under the unit cover beside the filter housing.

User guide

Billi Eco Sparkling – XL.



Dispenser Icon

Orange dot.

Flashes when filter change due. On constant when overdue.

Red lock illuminated.

Safety button activated. To use, press the indent on the back of the tap momentarily & lift or press the boiling lever.

Green leaf illuminated.

Eco intelligence.

Green moon & stars illuminated.

In holiday mode. Red & blue icons will not be displayed in this mode.

Green moon & stars flashing

In standby mode. Red & blue icons will not be displayed in this mode.





















Red dot.

Flashes when heating up to temperature. On constant when boiling water ready. Off when in holiday or standby mode.

Blue dot.

Flashes when chilling. On constant when chilled water ready. Off when in holiday or standby mode. Red & blue dots will flash yellow if the unit goes into fault.

Dispenser Icon codes

	Red		Normal operation
	Blue		Normal operation
	Red		Operating temperatures of hot and cold water not yet reached
	Blue		
	Red		Boiling water disabled
	Blue		
	Red		System in holiday or standby mode or off
	Blue		
	Orange		Unit in fault mode
	Orange		

User guide

Billi Eco Sparkling – XL.

Billi Filter Cartridges

The Eco Sparkling is fitted with single dual action filter incorporating sediment and chemical removal elements. All Billi Eco filters are manufactured using bacteria and biofilm resistant materials for improved water quality.

Premium filters provide better tasting water due to the high quality, carbon chemical removal filter. Sub micron rated, these filters have excellent chemical absorption, removing or reducing chlorine, volatile organic compounds (VOCs), chemicals, tastes and odours. Use only genuine filters as designed for this system. All drinking water filtration systems should be flushed after a period of non-use. If your Eco Sparkling has not been used for a period of 48 hours or more, flush the system for 1 minute.

Replacement of Billi Filter Cartridge

Periodic replacement of your Filter Cartridge is necessary to maintain the cleanliness of your drinking water. Billi recommends a filter replacement every 6 months. A replacement filter change service is available. If you wish to install the replacement filter cartridges yourself, your Billi representative will provide genuine Billi replacement filter cartridge sets.

Filter Change Due Monitor

The Eco Sparkling filter change due monitor operates by counting the number of cups dispensed and the number of days elapsed until a pre-set level is reached. Once reached, the yellow filter icon as pictured above will turn on. The Eco Sparkling will continue to operate while the filter indicator is flashing. Water filters installed in areas with higher levels of sediment will experience a reduced service life. It may be necessary to change filters before the change filter indicator flashes. If particularly dirty water is noticed coming through the water supply, e.g. from other tap ware, immediately place your Eco Sparkling into Holiday Mode by pressing the Pressure Relief button. This will help prevent premature blocking of the filter cartridges.




User guide

Billi Eco Sparkling – XL.

Filter removal and replacement instructions

Important note: Please ensure you remove the foam packing under the filter before installing.

1. Remove the front panel.
2. Place the unit in Holiday Mode by pressing the Pressure Relief button once. The lights on the dispenser will alternate and then go off
3. Hold filter and swing towards you slowly. The top of the filter is in a hinged cradle assembly. It should stop after approximately 30 degrees of travel.
4. The filter can now be released from the holding cradle by pulling down on the filter.
5. Take care not to spill water in the base of the tray. If so wipe gently with absorbent paper.
6. Install new filter into the same location by pushing all the way up into the cradle.
7. Push filter back into the unit until it locks into place. Power light should come back on.
8. Flush chilled side until water flow stops. Wait 10 minutes. Repeat these steps 2 times.
9. Check for any leaks from around the filter, hosing or pipeworks.
10. Replace the front cover.

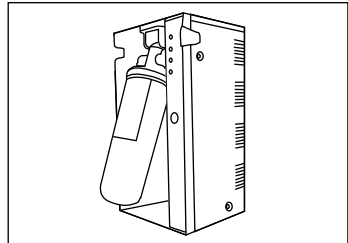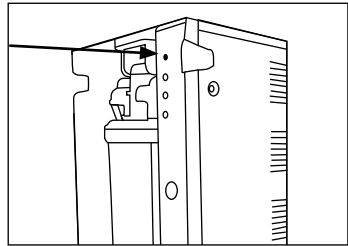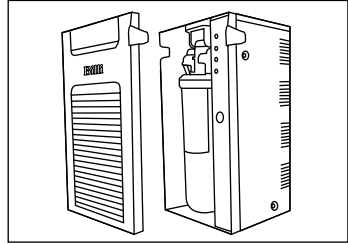

User guide

Billi Eco Sparkling – XL.

Installing the CO₂ cylinder

1. Ensure all connections between the regulator and unit are secure.
Position the regulator on top of the CO₂ cylinder.
2. Tighten the bottle by rotating anti-clockwise.

CO₂ will escape while you are turning the bottle. Continue to turn the bottle to form a seal with the regulator.
5HIHIG IDJDP\$

3. Open the pressure regulator by turning the black knob clockwise.
5HIHIGLDWDP %

Set the initial pressure to around 1 Bar.
5HIHUGLDUUP &

7X CR QWIKX QUS RZ HD GZ DMVRUVKH

4. Check bottle and connections for leaks using soapy water to test for bubbles.

NOTE: the ..." tube and pushfit fittings may settle when the pressure is turned on.

5. Increase the pressure to set your level of carbonation.

Initial set point may vary once the unit is running, you may need to reset the pressure once the system has stabilised.

WARNING: ' o not set the pressure above 5 bar.

User guide

Billi Eco Sparkling – XL.

Thank you for choosing to install a Billi Eco Drinking Water Appliance. Your Eco is manufactured to exacting standards using high quality materials and with proper maintenance and care, should function for many years.

For information on our filtration and service contract please contact Billi Head Office on 1800 812 321 or email us at service@billi.com.au.

For technical support please call 1800 812 321 and speak to one of Billi's experienced technician's.

To book a service call out request a filter change or please contact the Billi Service Centre on 1800 812 321 or book online at www.billi.com.au

Filter cartridges are also available for purchase online at www.billi.com.au

