

Filter replacement instructions



Premium Filtration




Billi has partnered with BWT to provide the highest quality filters for our instant boiling and chilled filtered water systems.

Billi Filter replacement instructions

Models: Eco, Sahara, Sahara Plus, Alpine 125, Home BC, Home BA

IMPORTANT NOTE: Please ensure you remove the cardboard spacer under the filter before installing.

1. Remove the front panel.
2. Place the unit in Holiday Mode by pressing the Pressure Relief button once. The lights on the dispenser will alternate and then go off.
3. Hold filter and swing towards you slowly. The top of the filter is in a hinged cradle assembly. It should stop after approximately 30 degrees of travel
4. The filter can now be released from the holding cradle by pulling down on the filter.
5. Take care not to spill water in the base of the tray. If so, wipe gently with absorbent paper
6. Install new filter into the same location by pushing all the way up into the cradle.
7. Push filter back into the unit until it locks into place. Power light should come back on.
8. Flush chilled side until water flow stops. Wait 10 minutes. Repeat these steps 2 times.
9. Check for any leaks from around the filter, hosing or pipework.
10. Replace the front cover.

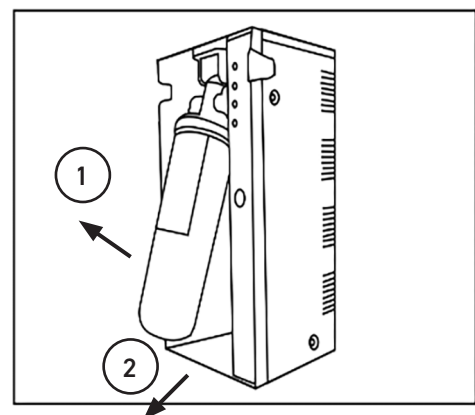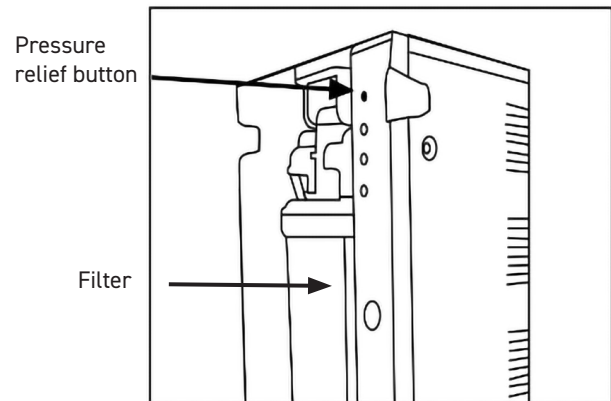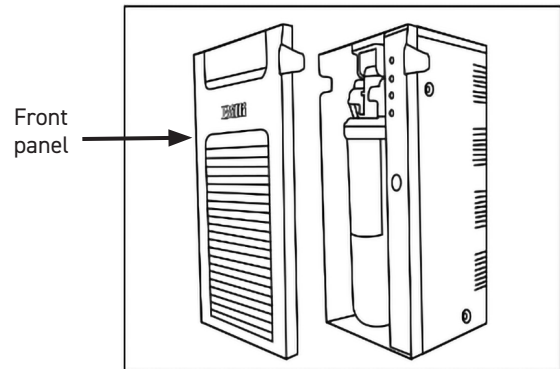

Billi Filter replacement instructions

Models: Quadra & Quadra Plus

IMPORTANT NOTE: Please ensure you remove the cardboard spacer under the filter before installing.

1. Remove the front cover (see Diagram 1).
2. Press & hold the ON/OFF button until the LCD screen says OVERRIDE OFF. Leave the power supply on.
3. Remove the filter (and filter bypass insert if required) (see Diagram 2).
 - a. Hold the bottom of the filter (and filter bypass insert if required) and pull towards you slowly. The top of the filter is a hinged cradle assembly. It should stop after approximately 30 degrees of travel.
 - b. Pull it down until it pops out.
4. If water spills in the tray at the base of the filter, soak it up with a cloth or sponge.
5. If a single filter fits the new filter by pushing right up into the cradle & pushing back until it locks into place.
6. Units will now begin an automatic flush cycle.
7. Check for any leaks from around the filter, hosing or pipework.
8. Replace the front cover.
9. Once the lights stop flashing, your system is ready to use.

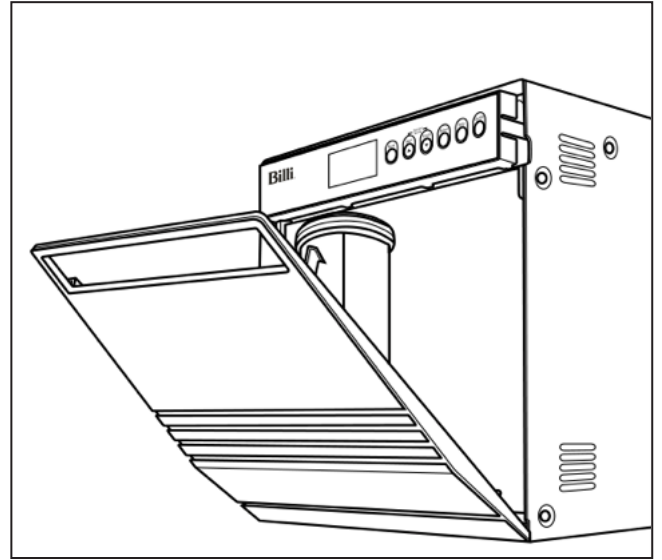


Diagram 1

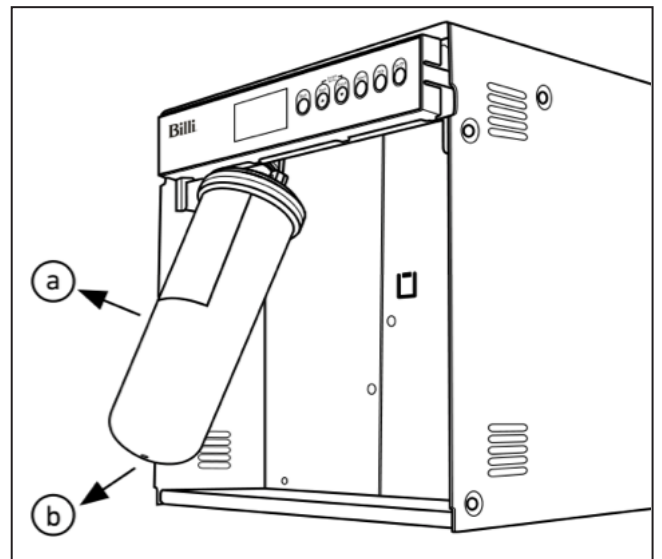





Diagram 2

Billi Filter replacement instructions

Models: Alpine 60, Alpine 120 & Home C

IMPORTANT NOTE: Please ensure you remove the cardboard spacer under the filter before installing.

1. Isolate the water supply to the unit at the wall.
2. Remove the front panel to unit.
3. Turn temperature control to OFF
4. Open tap to release any pressure.
5. Close tap.
6. Grasp the bottom of the filter and pull towards yourself slowly. The top of the filter is in a hinged cradle assembly. It should stop after approximately 30 degrees of travel.
7. The filter can now be released from the holding cradle by pulling down on the filter.
8. Take care not to spill water in the base of the tray. If so, wipe gently with blotting paper.
9. Install the new filter into the same location by pushing up into the cradle all the way.
10. Push filter forward until upright and lock in place.
11. Turn the water supply to unit on.
12. Open tap again.
13. Run water for 2-3 minutes to flush all the air out and condition the filter.
14. Close tap.
15. Check for any leaks from around the filter, hosing or pipe work.
16. Turn temp control to ON & set temperature to desired level.
17. Close the front cover.

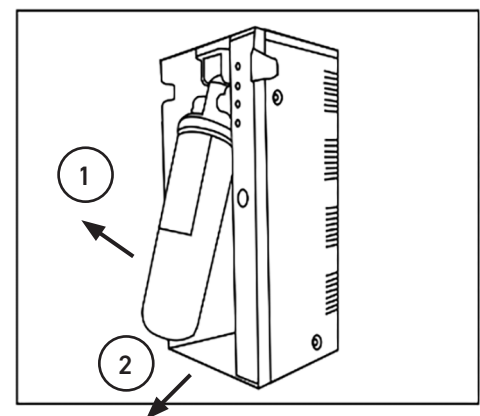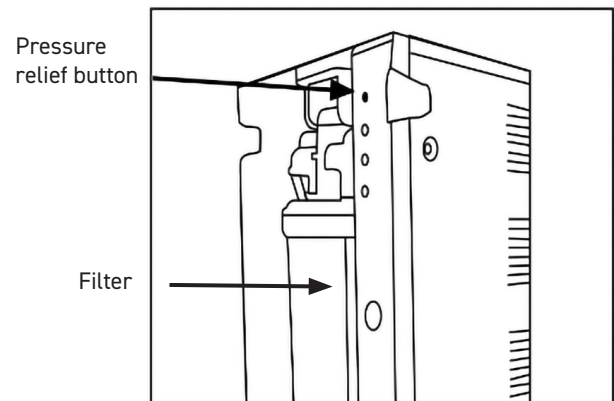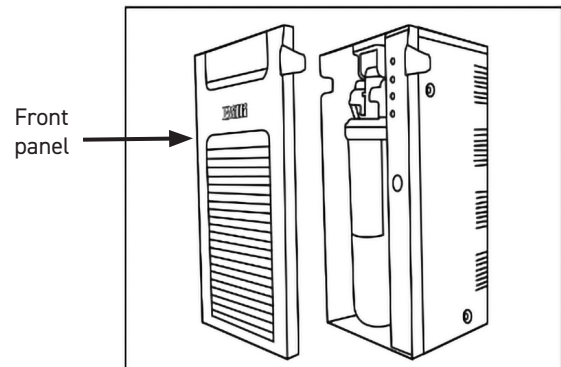

Billi Filter replacement instructions

Models: OmniOne, OmniOne Plus and Home BCS

Filter Removal and Replacement Instructions

Important note: Please ensure you remove the cardboard spacer under the filter before installing.

1. Pull the filter cover edge where it's marked "OPEN HERE" to open the filter cover (see Diagram 1).
2. Press the **CHANGE FILTER** button in the Filter Screen.
3. Wait a few seconds to allow the filter to de-pressurise.
4. Remove the filter (and filter bypass insert if required) (see Diagram 2).
 - a. Hold the bottom of the filter (or the filter bypass insert) and pull towards you slowly to hinge the bottom out. The top of the filter is a hinged cradle assembly and should stop after approximately 30 degrees of travel.
 - b. Carefully pull the down in the direction it is tilted until it pops out.
5. If water spills in the tray at the base of the filter, soak it up with a cloth or sponge.
6. Fit the new filter by pushing right up into the cradle and pushing the base of the filter back in until it locks into place.
7. The system will now begin an automatic flush cycle and will display "FLUSHING FILTERS" in the Main Status Bar. Dispenser lights will also flash.
8. Check for any leaks from around the filter, hosing or pipework.
9. Close the filter cover.
10. Once the dispenser lights stop flashing and "SYSTEM READY" is displayed in the Main Status Bar your system is ready to use.

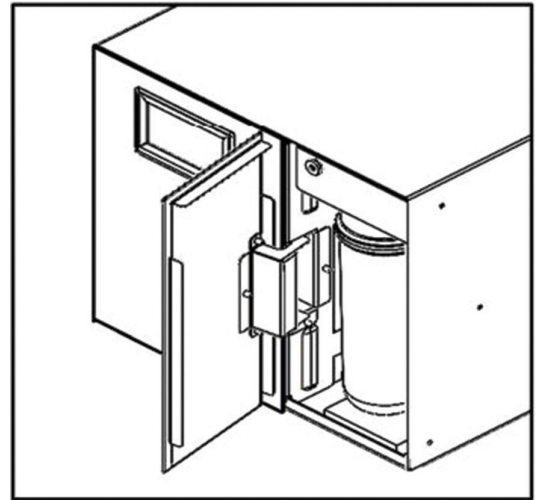


Diagram 1


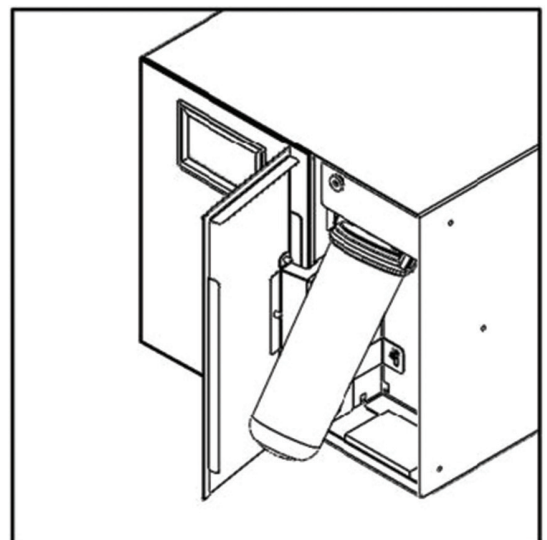


Diagram 2

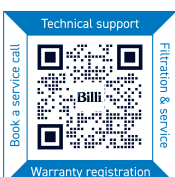

Please scan the QR code for all support information.

Billi Australia Pty Ltd

P 1800 812 321
W www.billi.com.au

Billi New Zealand Ltd

P 0800 636 0 636
W www.billi.co.nz

Billi UK Ltd

P 020 7456 6789
W www.billi-uk.com

Billi®

Designed and manufactured in Australia.

Billi® is a registered trademark of Billi Australia Pty Ltd. Billi OmniOne™ is trademark of Billi Australia Pty Ltd. All rights reserved. © Copyright protected. Billi Australia Pty Ltd has a policy of continual improvement, all details are subject to change without notice. All goods are sold subject to our published terms and conditions.

610110 V03